Specifications are subject to change (22.05.2006)

Motor Controllers AC Semiconductor Motor Controller Type RSMR

Soft starting and stopping of 3-phase squirrel cage motors

- 2 Phase controlled (without bypass relay)
- Reliable microprocessor control
- 10 pre-programmed ramping profiles
- Rated operational voltage up to 480VAC, 50/60 Hz
- Rated operational current up to 90A AC-53a
- LED status indicator
- · Kickstart option for high torque loads
- Auxiliary relays for top of ramp and run
- Phase loss protection at starting
- Over-current "shear-pin" protection

Product Description

The RSMR is a microprocessor based soft starter for 3phase induction motors. A rotary knob enables selection from 10 pre-programmed ramping profiles. The choice is suggested by a list of popular

applications that corresponds to the positions of the selector. No external supply is necessary as starting and stopping are controlled by closing and opening a contact.

Ord	lering	Key

M-line Motor Controller — Rotary ramp selector — Rated operational voltage – Rated operational current —

Selection Guide

Rated operational voltage Ue	Rated operational curren 72A AC-53a	t I。 90A AC-53a
340-506 VAC, 50/60 Hz	RSMR4072	RSMR4090

Supply Specification

Rated operational voltage Ue through	
L1, L2, L3	340-506VAC rms
Rated AC frequency	50/60 Hz ±2Hz

Input Specifications

Control supply	Internal
Control contacts S0, S1	close to start,
	open to stop
Soft Stop Control	no more than 3m
	from enclosure

Load Ratings

	RSMR4072	RSMR4090
IEC rated operational current le (AC-53a) @ 40/50/60°C	72/57/43 A	90/72/54 A
Assigned motor rating @ 40°C		
400V	37kW/50HP	45kW/60HP
460V	40kW/54HP	45kW/60HP
Overload cycle to IEC/EN 60 947-4-2	72A: AC-53a: 5-4: 99-10	90A: AC-53a: 5-4: 99-10
Power dissipation at rated operational current	119W	144W
Number of starts per hour @ 40°C	10 (starting interval 6 minutes)	
Start duty	5 x FLC for 4 seconds	
	4 x FLC for 6 seconds	
	3 x FLC for 12 seconds	
	2 x FLC for 26 seconds	
Shear-pin cut-off level	currents in excess c	f 5 x FLC for 500ms



CARLO GAVAZZI

RSM R 40 90

CARLO GAVAZZI

General Specifications

Degree of protection	IP20 (IEC 60529)	
Relative humidity max.	85% non-condensing,	
	not exceeding 50% @ 40°C	
Rated insulation voltage Ui	460V	
Pollution degree	3	
Ramp up time	1 to 15s	
Ramp down time	0 to 15s	
Application selection	10 position rotary switch	
Status indicator LED	red continuous: active,	
	red intermittent: fault	
Auxiliary relay contacts		
Run 13,14	Normally open	
Top of ramp 23,24	Normally open	
Auxiliary relay contact capacity	5A, 250V AC1	
Installation altitude	Above 1000m derate	
	linearly by 1% of unit	
	FLC per 100m to a	
	maximum altitude of	
	2000m	
Form Designation	Form 1	
Rated Short Circuit Current (Iq)	20kA	
Short Circuit Co-ordination	Туре 1	

Conductor Data

Power conductors	
Size	16mm ² to 35mm ²
	(AWG 6 to 2)
Tightening torque	≤2.5Nm
Screw driver	Flat, size 7
Auxiliary conductors	
Size	0.5mm ² to 2.5mm ²
	(AWG 20 to 14)
Tightening torque	≤0.5Nm
Screw driver	Flat, size 3
Ground/earth conductor	1.0mm ² or
	5mm earth stud

Thermal Specifications

Operating temperature*	0° to +40°C
	(32° to +140°F)
Storage temperature	-25° to +60°C
	(-13° to +140°F)

 * Above 40°C derate linearly by 1% of unit FLC per 100m to a max. of 40% at 60°C.

Standards

Markings	CE
Norms	IEC/EN 60947-4-2


EMC Emission and Immunity Levels

ESD immunity	IEC 61000-4-2
-	6kVcontact or 8kV
	air discharge
R F immunity	IEC 61000-4-6
	140dBuV over 0.15-80MHz
R F immunity	IEC 61000-4-3
	10V/m over 80/100MHz
Fast transient immunity	IEC 61000-4-4
	2kV/5kHz
Surge immunity	IEC 61000-4-5
	2kV line to gound
	1kV line to line
Conducted RF emissions	EN55011 Class A
Radiated RF emissions	EN55011 Class A


Recommended Protection

	RSMR72		RSMR90
Semiconductor fuse	Ferraz Shawmut, type PSC	Semiconductor fuse	Ferraz Shawmut, type PSC
	250 A, body size 31,		250 A, body size 31,
	Art.No. 6,6URD31D11A0250		Art.No. 6,6URD31D11A0250
	or 6,6URD31EF0250		or 6,6URD31EF0250
	Bussmann, type Zilox, 250 A,		Bussmann, type Zilox, 250 A,
	body size 1, Art.No. 170M3116		body size 1, Art.No. 170M3116

CARLO GAVAZZI

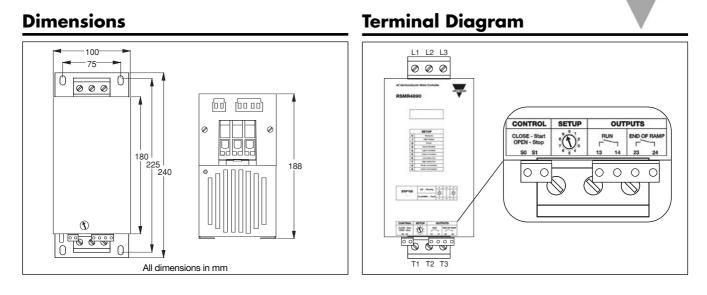

Control Diagrams and Applications

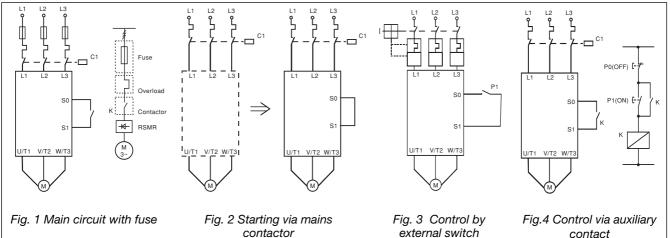

Fusing Considerations (Fig.1)

This motor controller uses semiconductors during running operation. Therefore the semiconductors can be damaged by short-circuit currents. The best protection is with semiconductor fuses.

Changing from Direct ON Line start to soft start (Line controlled soft-start) (Fig. 2)

Changing a Direct On Line start into a soft start is very simple with the RSMR soft starter:

- 1) Cut the cable to the motor and insert the RSMR soft starter.
- 2) Short the control input S0, S1 with the link provided
- 3) Power up again adjust the start torque so the motor starts turnina immediately after power is applied.

When C1 is operated, the motor controller will perform soft-start of the motor. When C1 is switched off, the motor will stop (no soft-stop), the external switch

motor controller will reset and a new soft-start can be performed.

Please note that the controller does not insulate the motor from the mains. A mains contactor C1 is therefore needed.

Soft-start and stop with 2 position switch

(Fig. 3) When P1 is closed, soft-start of the motor will be performed according to the setting of the rotary setup knob. When P1 is opened, softcontact

stop will performed be according to the setting of the rotary setup knob.

Soft-start and stop with push-to-make and pushto-break switches (Fig. 4)

Pushing P1 soft-starts the RSMR. Pushing P0 softstops the RSMR. K is the auxiliary contact of an external mains contactor.



Operation Diagram

